

## User manual for Doro Primo 366



1. Left soft key - Press to open main menu
2. Right soft key - Press to open phonebook
3. Call key - Make and answer calls; Press once to open Call log
4. End key - Press to end a call; press to return to standby; press and hold to turn the phone on and off
5. Speed dial/Quick functions keys - M1 and M2 are speed dial keys. Camera and SMS key for quick access
6. Arrow keys - Press to open shortcut functions; press to open messages; scroll up and down in menus and lists
7. Numerical keys - Press to enter numbers; long press key 1, to call your voice mailbox (phone number must be stored); when writing, press to input numbers or characters
8. \* key - Press to enter \*/+/P/W; when writing, press to enter special characters
9. Charging cradle
10. # key - Long press to toggle between Silent and Normal mode

11. Cradle charging contacts
12. Micro-USB port - For charger
13. Headset socket - For 3.5 mm standard headset
14. Torch LED
15. Camera lens
16. Loudspeaker
17. Assistance key
18. Torch key - Switch torch on and off
19. Keypad lock - lock/unlock
20. + and - keys - Adjust ring volume and loudspeaker volume
21. LEDs - Blue = battery full; Red = battery charging

## **Specifications**

Network: GSM 900/1800/1900 (Tri-band) MHz

Dimensions: 119 mm x 56 mm x 12 mm

Weight: 88 g

Battery: 3.7V/1000 mAh Li-ion battery

Operating ambient temperature: Min: 0°C (32°F) Max: 40°C (104°F)

Charging ambient temperature: Min: 0°C (32°F) Max: 40°C (104°F)

Storage temperature: Min: -20°C (-4°F) Max: 60°C (140°F)

## **Install the SIM card and the battery**

The SIM card holder is located inside the battery compartment.

### **1. Remove the cover**

Slide your fingernail into the small notch on the bottom side of the phone and pull the cover upward.

If the battery is installed, slide your fingernail in the notch below the Assistance key to lift it up.

### **2. Insert the SIM card (required)**

Insert the SIM card by carefully slide it under the metal bracket. Make sure the contacts on the SIM card face down and the cut off corner is positioned according to the figure. Do not scratch or bend the card contacts. Try not to touch the contacts with your fingers.

### **3. Micro-SD card (optional)**

Lightly press the card holder and push it carefully toward SIM card holder until it unlocks. The card holder can now be flipped up vertically. Place the memory card in the plastic bracket. Make sure that the memory card contacts face down and that the card is placed in formed area area. Do not scratch or bend the card contacts. Push the metal holder back down, press it flat and slide it until it snaps into place.

### **4. Insert the battery (required)**

Push it into the battery compartment ensure that the three contacts on the battery touches the three spring contacts in the battery compartment.

### **5. Replace the cover and press it all the way around to make sure it is closed**

When battery performance is low, the empty battery symbol flashes. To recharge the battery, connect the mains adapter to the micro USB connector on the bottom side of the phone. Alternatively you can place the telephone in the charge cradle connected to the mains adapter via the USB cable.

During charge, the red charge LED is on. The battery charge icon moves during charge (visible in the upper right corner of the display). It takes approximately 3 hours to fully charge the battery. When fully charged the charge icon stops moving.

## **Power on the phone**

Press and hold the red key on the phone at least 2 sec. to turn it on and off. If the SIM card is valid and protected with a PIN code (Personal Identification Number), Enter PIN is displayed. Enter the SIM PIN code and press OK ( upper left corner of keypad). Delete with Delete ( upper right corner of keypad).

## **Set the language**

By default the phone's menu language is determined by the SIM card. You can always switch between the languages supported by the phone.

1. Press Menu - Settings - OK.
2. Select Phone settings - OK.
3. Select Language - OK.
4. Select language from the list - OK.

### **Set time and date**

1. Press Menu → Settings - OK
2. Select Phone settings - OK
3. Select Time and date - OK
4. Select Set time/date - OK.
5. Enter the time (HH:MM)
6. Enter the date (DD.MM.YYYY)
7. Use \* and # to select Daylight saving - On or Off - Save.

### **Make a call**

1. Enter the phone number with the area code. You can delete digits with Clear.
2. Press the Call Key (3) to dial. Press Abort to cancel the call.
3. Press the End Key (4) to end the call.

**Tip:** For international calls, always enter a + symbol before the country code to be able to use the phonebook optimally in any country.

Press the \* key twice to enter the international area code +.

### **Answer a call**

1. Press Call Key (3) or Answer to accept the call or press Reject to reject the call (busy signal). Alternatively, you can press the End Key (4) to reject the call directly.
2. Press the End Key (4) to end the call.

### **Create phonebook entry**

1. Press Menu - Phonebook - OK.
2. Select Add new contact - Add.
3. Select whether you want to save the contact on the SIM card or in the phone.
4. Enter a name for the contact.
5. Press Down Arrow.
6. Enter the phone number including the area code.
7. Press Down Arrow.
8. Then press Options - Save - OK.

**Tip:** For international calls, always enter a + symbol before the country code to be able to use the phonebook optimally in any country.

Press the \* key twice to enter the international area code +.

## Entering text

### Select character

- Press a numerical key repeatedly until the desired character is shown.
- Wait a few seconds (until the blue or yellow background of the character has disappeared) before entering the next character.

### Special characters

- Press \* to view a list of special characters.
- Select the desired character with \* or # (to move left and right) and press OK to enter.

### Move the cursor within text

- Use the Quick function keys (6) to move the cursor within the text.

### Upper case, lower case and numerals

- Press # to choose the input mode. The symbol at the top left in the display indicates the input mode.

## FM radio

To listen to the radio, you should connect a compatible headset which acts as an antenna.

1. Press Menu - Multimedia - OK.
2. Select FM radio - OK.
3. Set the volume with the side keys +/-.
4. Select a Frequency by using the Quick function keys (6).
5. Mute and unmute the radio with Pause
6. Press Options, then:
  - **Channel list** - list of the saved channels.
  - **Manual input** - to select a frequency manually via fine tuning.
  - **Auto. search** - radio station scan and saving of the stations found.
  - **Manual search** - to select a frequency manually via fine tuning.