

## **Alcatel TMAX 10 Big Button Corded Phone with Photo Dialing for Elderly**



## Before 1st use


Connecting your phone:

- Connect the handset
- Plug the telephone line into telephone socket

## Installing the phone


Your phone should be placed on a level surface

- Plug one end of the spiral cord into the handset at (A), and the other end into the socket on the left side of the phone (B)
- Plug the telephone cord into the socket at the bottom of the set and into the wall socket (C)
- For desktop position, always install the foot stand (D)
- 

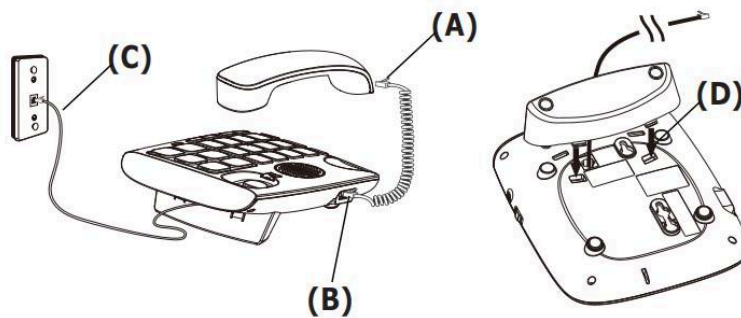

Spiral cord socket (B)

## Wall mounting

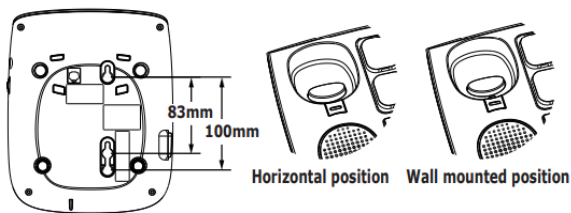

- Remove the foot stand
- Turn over the wall mounting peg (small grooved plastic part) on the base
- Drill two 6 mm holes 100 mm apart

- Fit two wall plugs and screw in wood screws (3.5 mm in diameter and 30 mm long)
- Mount the base on the 2 screws by pulling it downwards

## Install pictures on the memory buttons



- Open the cap of the button
- Cut the picture with the shape provided
- Insert the picture and put back the button cap

Note: The shape of the photo can be found at the end of this user guide.





1. 16 direct memory keys (number only)
2. Indicator: Mute on (microphone off)/ Ringer (incoming call)
3. Ringer volume switch
4. Mute key ( microphone off)
5. Pause key
6. Handsfree or Handset volume increase
7. Handsfree or handset volume decrease
8. Flash Key
9. Hands free key
10. Last number redial key



## Make a call / Redial

- Pick-up the handset or press  key (handsfree mode).
- Dial the number or press one of the 6 number keys (with picture).  
See how to register in paragraph "Store number".  
At the end of the communication:
- Replace the handset on its base or press  key (exit handsfree mode).



## Dial back an outgoing number

- Pick-up handset or press  key
- Press  key

## Answering a call

- TO answer: pick-up the handset or press  key (handsfree mode)
- To end a call: Replace the handset on its base or press  key

## Handset and speaker volume level adjustment

- Press  to increase the volume level
- Press  to decrease the volume level
- 4 levels selectable

## Store number (6 keys with picture)





- Pick-up handset
- Choose one key (with picture) and make a long press on it (at least 5 seconds)
- Enter the number by using keypad
- Press again the same key

The number is registered.

## Flash time

For France, flash time value is 300ms by default (no change needed).

If change is needed:

-  / **\*#\*100 / R** = 100ms
-  / **\*#\*300 / R** = 300ms
-  / **\*#\*600 / R** = 600ms
-  / **\*#\*1000 / R** = 1000ms

## Safety

- Do not use your telephone to notify a gas leak or other potential explosion hazard.
- Do not open your device to avoid risk of electrical shock.
- Your telephone must be located in a dry place away from hot, humid and direct sunlight conditions.