


Erazer ER50 Clip-On Open-Ear Wireless Earphones

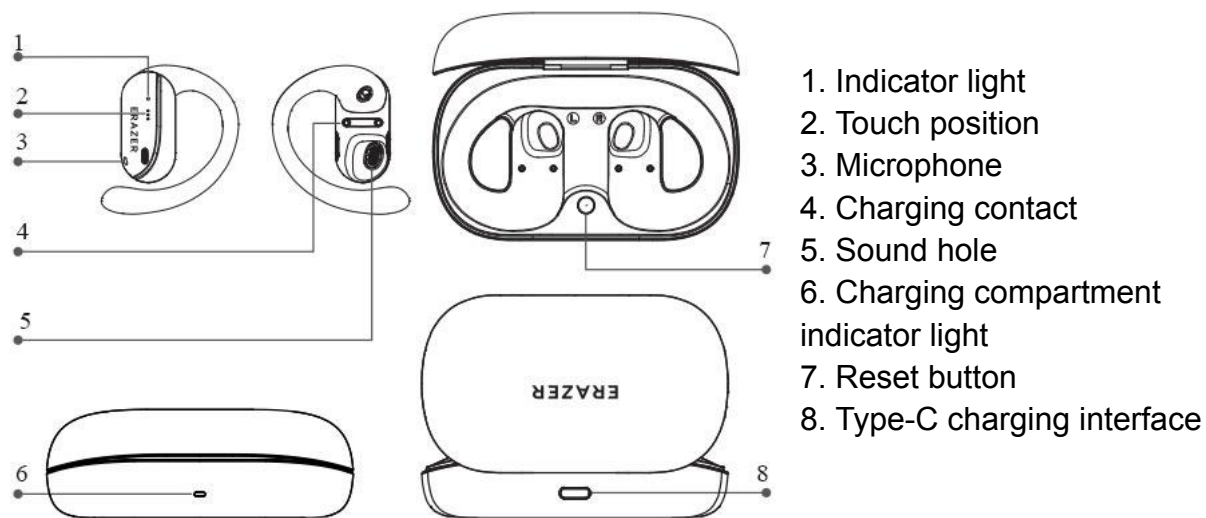



Instructions

1. Connection: Take out the earphones from the charging compartment and pair them in left and right ear pairing mode. After pairing the left and right ears, search for the Wireless name and connect.
2. Power on: The cover will automatically turn on when opened.
3. Shutdown: When the earphones are placed in the compartment and the lid is closed, it will automatically shut down.
4. Automatic reconnection: After connecting, turn off and then turn on the device to automatically reconnect.
5. Play/Pause: Click on the earphones (L/R).
6. Previous song: Triple tap headphones (L).
7. Next song: Triple tap headphones (R).
8. Volume up: Double click on the headphones (R).
9. Volume reduction: Double click on the headphones (L).
10. Answering phone calls: Click on the earphones (L/R).
11. Hanging up the phone: Click on the earphones (L/R).
12. Cancel dialing: Click on the earphones (L/R).
13. Call rejection: Long press the earphones (L/R) for 2 seconds.
14. Voice Assistant: Long press the earphones (L/R) for 3 seconds.
15. Game/Music Mode: Touch the earphones (L) or earphones (R) 4 times, accompanied by a "Game Mode" prompt sound, to enter game mode; In game mode, touch the earphones (L) or earphones (R) 4 times to enter music mode with the "Music Mode" prompt sound.
16. Clear TWS and phone connection, put the earphones back into the compartment, long press the reset button for 5 seconds.

Safety guidelines

1. Do not disassemble or modify the equipment for any reason, otherwise it may cause the headphones to malfunction or burn out.
2. Do not let the device come into contact with liquid and get wet, otherwise it may cause serious damage to the device.
3. Do not place the device in an environment where the temperature is too low or too high (below 0°C or above 45°C).
4. Do not use the equipment during thunderstorm weather, as thunderstorms can cause abnormal equipment operation, signal interruption, and other phenomena.

Danger Warning

Headphones contain batteries and should not be exposed to environments such as sunlight, fire, or similar overheating. Headphones contain batteries, and there is a risk of explosion if the batteries are not replaced properly. Only batteries of the same or equivalent type can be used for replacement.

When children use this product, an adult must supervise from the side

Do not place this product in environments with corrosive substances or strong magnetic fields.

Do not collide, throw, or puncture the product to avoid falling, squeezing, or bending it.

Basic parameters

Battery capacity - 600mAh (charging compartment) / 70mAh * 2 (earphones)

Effective distance - 10m

Charging parameters - 5V/400mA

Play music for battery life - About 4H

Charging interface - Type-C

Earphone charging time - About 40-50 min

Charging case battery life - The earphones can be charged approximately 3 times when fully charged

Frequency Response - 20Hz-20KHz

Wireless version - V6.0

Speaker impedance - 16Ω±15%