 



Q70V Voice Recorder Smart Transcription Voice Activated Recording Device - 64GB




Recording Function

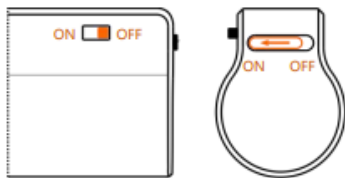

 Regular recording voice

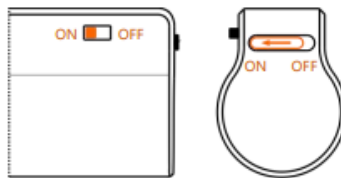

activated recording

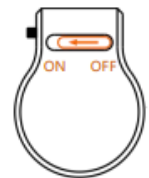

Save/shutdown

Regular recording: without inserting wired earphones, turn the VOR switch to the "OFF" position, turn the recording switch to the "ON" position, the red light flashes a few times and then goes off;

Voice activated recording: Without inserting wired headphones, turn the VOR switch to the "ON" position, turn the recording switch to the "ON" position, the blue light flashes a few times and then goes off;

Save recording: Turn back the recording switch to the "OFF" position to save the recording automatically and turn off the device.

Note: During the recording process, do not connect to the computer, otherwise the recording file will be lost by mistake.

Play Function

Play


1. Plug in the adapter earphones
2. Push the recording switch to "ON" position, enter music play

Music/recording switch: lightly press “▶||” to switch music play or recording play.

Volume adjustment: During the play state, long press “+” key or “-” key to increase or decrease volume;

Track switching: During the play state, lightly press the “+” key or “-” key to switch between previous and next song.

Expand function

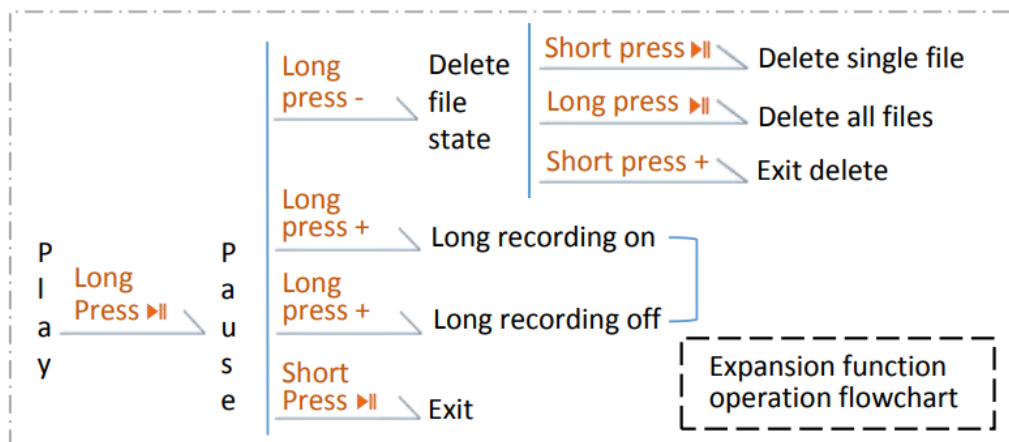

1/Pause: During play state, long press “ ►|| ” key to enter pause state (red and blue lights flash alternately); press “ ►|| ” key to exit the pause.

2/Delete file:

During pause state, long press “-” key, release your hand after the purple light flashes to enter the delete state (flashing purple light);

❶ Lightly press “ ►|| ”key to delete the currently playing file (blue light flashes), ❷

Long press “ ►|| ” key to delete all files (red light flashes), ❸ Lightly press “+” key to exit the delete mode. After entering the delete state, the above three operations can be selected.

Note: Play recording status means delete all recordings, and play music status means.

3/ Long recording (saving memory space, low recording sampling):

❶ Turn on long recording: During pause state, long press “+” key 3 seconds, the indicator light flashes blue lights several times quickly;


❷ Turn off Long recording: During pause state, long press “+” key 3 seconds, the indicator light flashes red lights several times quickly;

Long recording: After turning on the long recording, without plugging in the earphones, restarting (flashes blue light several times) is the super long recording.

4/ Fast forward and fast rewind: (requires restart the machine) Plug in the adapter headphones, first, press and hold the “+” button, then turn the switch to the “ON” position until the playback starts, and then release it; Press and hold the “+” key to fast forward, and press and hold the “-” key to rewind. If you need to use it, you need to set it up everytime. There is no volume adjustment in this state.

Time synchronization

Change the time of the recorder, connect the machine to the computer, enter the disk, and you will see a folder named <SET TIME.exe >, copy this folder to the desktop, open the folder, double-click the < SET TIME.exe > As shown in the figure, confirm whether the computer time is accurate, click <Set Time>, it means that the time synchronization is successful. The recording file will be named with the correct time.

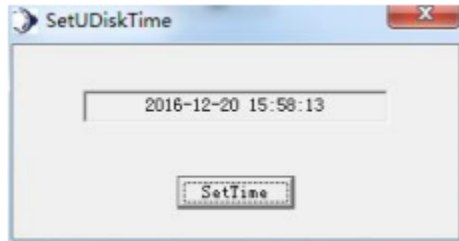

If you need to format the machine, please backup this folder, Prevent loss.

Questions and answers

1/Suddenly unable to record:

Please back up important files first and format them on the computer. If they can be used normally after formatting, please clean up the computer in time. This is a computer virus infection of the recorder, causing the recorder to be unusable. It may take a long time. It will cause damage to the machine beyond repair.

2/The indicator light has no response or is always on in an abnormal state:

Please back up important files first, and then restore the factory settings. After connecting to the computer, click MyComputer, find the mobile drive letter and right-click the mouse, select Format, and then select Quick Format. In this way, the factory settings can be restored and most of the faults can be eliminated.

3/No response after connecting to the computer via the data cable:

Reconnect the computer (check whether the plug is inserted in place) and see if the removable disk can be found. If the computer still does not respond, try to connect to a different computer. Some computers cannot be recognized because of the lack of drivers. If you still can't recognize it after trying (the recorder is always red or blue), you can contact the after-sales firmware upgrade.

This machine comes with an intelligent reset system, please save the recording file before connecting to the computer. Because the recording effect and sound quality of this product are relatively clear and the parameters are relatively high, the recording file is relatively large, please extract it in time. The company is not responsible for the loss of data.

Function parameter

Product type - Voice recorder - 4GB - Can save 48 hours

Record method - Power on recording, power off saving - 8GB - Can save 96 hours

Charging time - About 10 hours - 16GB - Can save 192 hours

Recording bit rate - 192KBPS - 32GB - Can save 384 hours

Recorder format - WAV - 64GB - Can save 768 hours

Sampling Rate - 48KHz - 128GB - Can save 1536 hours

Play format - MP3/WMA/WAV

Precautions

1/ When charging or connecting to a computer, turn on the switch to the "OFF" position. When unplugging, wait until the light is off before using it.

2/ After recording, regardless of whether the recorder is powered or not, you must turn the switch to the "OFF" position to save the recording file, otherwise the recording file will be lost.

3/ Please use a power adapter with a charging current of 1A or less for charging, otherwise it may damage the unit or cause danger.

4/ It is recommended to use the original USB data cable to connect the unit to the computer for charging.

5/ In charging state, the recorder flashes red light; once finished charging, the recorder will turn blue light on. If the machine has not been used for a long time, please make sure to discharge and charge it once every 3 months to prevent battery damage.