 


2.4G Smart Interactive Robot Dog with App/Voice Control




Battery installation instructions

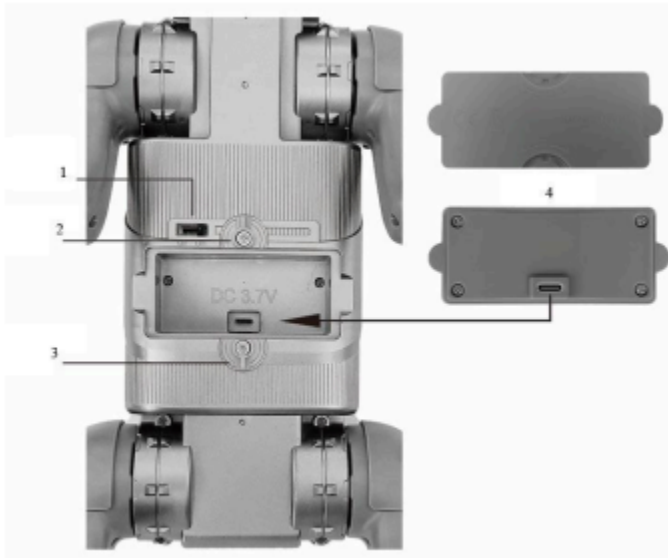

1. Switch button
2. Battery clip
3. Battery clip
4. Battery

Align the interface of the module battery with the internal interface of the robot dog, and insert the module battery horizontally downward into the battery compartment. Rotate the two battery clips to fix the modular battery.

Mode switching instructions

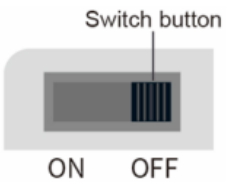

Shutdown mode - Turn the switch button to the right




Voice +APP - Turn the switch button to the middle



RC + Voice +APP - Turn the switch button to the left

1. Press the switch button at the bottom to the power position. At this point, the robot dog will give a voice prompt to start up.
2. In voice control mode, you need to call "Lumi, Lumi" each time to wake up the robot dog. After the robot dog responds, say the words and the sentences containing voice commands, and the robot dog will perform the corresponding command actions. During the demonstration of an action, you can call "Stop" to halt the action demonstration.

Charging instructions

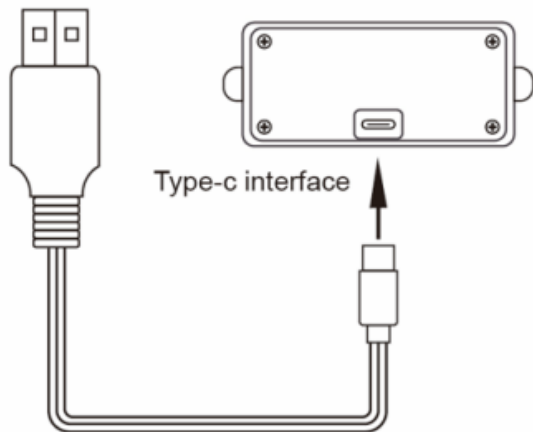

1. The 3.7V body battery equipped needs to be charged before use.
2. First, insert the charging cable plug into the modular battery interface, and then plug the USB charger into the USB interface to start charging.
3. It takes about 120 minutes to fully charge the battery. During charging, the indicator light remains "red" constantly on. Once fully charged, the indicator light goes off. Please do not overcharge. Charging for too long will not increase the battery level either.
4. Regularly inspect the toys, batteries, charging cables, wires and plugs. If any damage is found, stop using them immediately and do not use them until they are repaired or replaced.

APP download instructions




Universal APP download for both Apple and Android systems.

Scan the QR code on the left to download the dedicated APP and operate.

APP usage instructions



1. After successful download and installation, click on the APP icon to enter the operation interface.

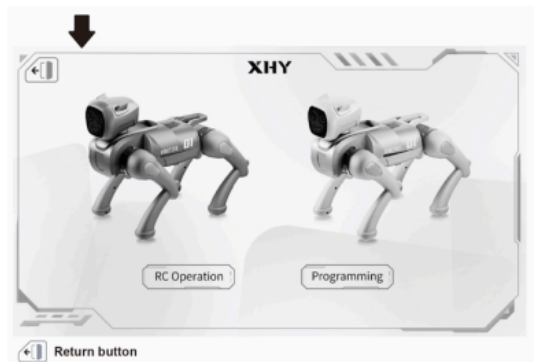

2. After entering this interface, click the start button to enter the next interface.

3. Click on the remote control operation to enter the remote control operation interface, and click on the programming Settings to enter the programming Settings interface. To return to the previous level interface, click the return button in the upper left corner of the interface.