 


Nokia 3310 Dual SIM



 
Product overview

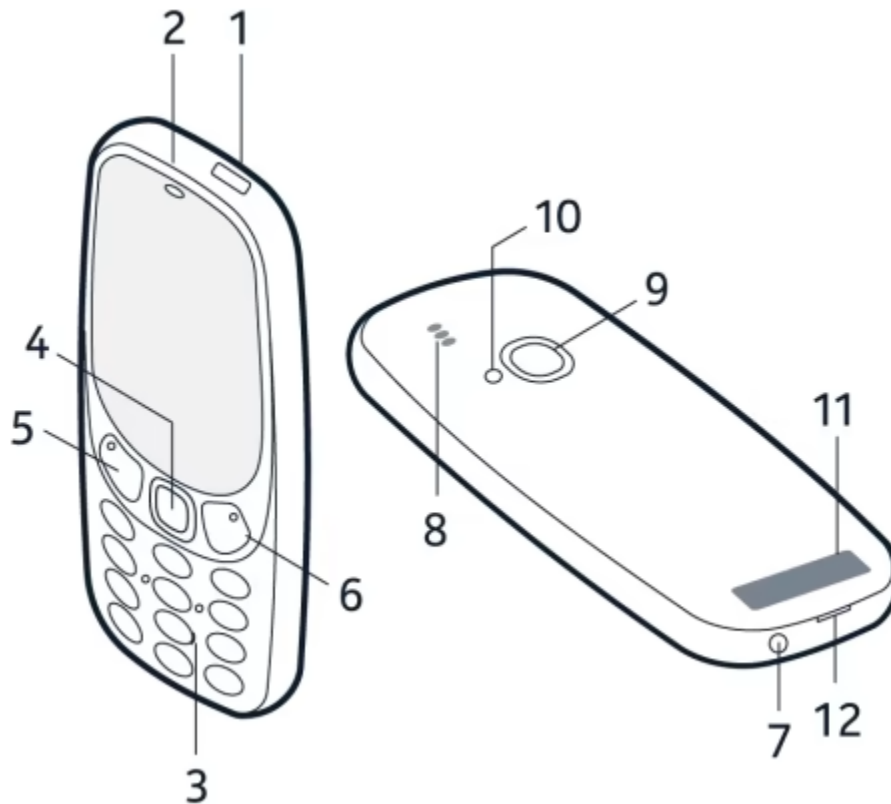

1. Charger connector
2. Earpiece
3. Number keys
4. Selection key (up, down, left, or right)
 - On the idle screen, quickly scroll up twice to switch on the flashlight. To switch off the flashlight, scroll up once.
5. Function key, call key
6. Function key, end call/power key
7. Headphone connector
8. Loudspeaker
9. Camera
10. Flash light
11. Antenna area
12. Back cover opening slot

Set up and switch on your phone

This phone is designed to be used with a one micro SIM card or two micro SIM cards.

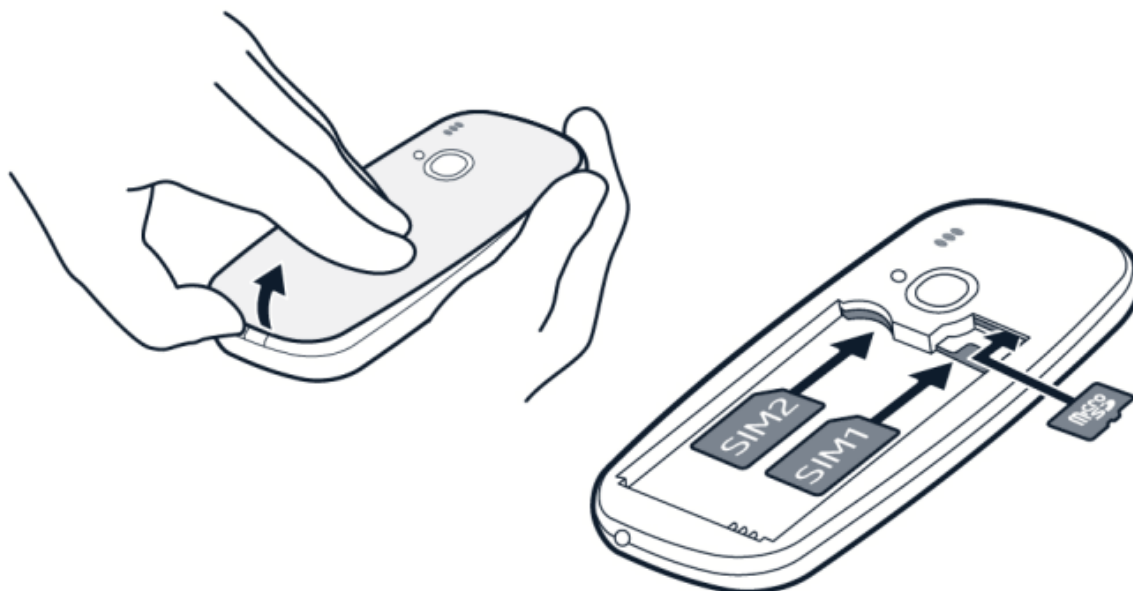

1. Place your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the first SIM into SIM slot 1 with the contact area face down. Slide the second SIM into SIM slot 2. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.
4. If you have a memory card, slide the memory card into the memory card slot.
5. Line up the battery contacts, and put the battery in.
6. Replace the back cover.

Switch on your phone

- Press and hold the function key (6).

Charge your phone

- Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.
1. Plug the charger into a wall outlet.
 2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet.

Lock or unlock the keys:

1. Lock the keypad: select Go to > Lock keypad


2. Unlock the keypad: Press the function key (6) and select Unlock

Select which SIM card to use:

1. Select Menu > Settings > Connectivity > Dual SIM
2. To choose which SIM to use for calls, select Call , switch Always ask to Off, and select Preferred SIM
3. To choose which SIM to use for messages, select Messaging , switch Always ask to Off, and select Preferred SIM
4. To choose which SIM to use for mobile data, switch Mobile data connection to On, and select Mobile data > Preferred SIM

Change the volume:

- Scroll up or down to change the volume during a call or when listening to the radio.

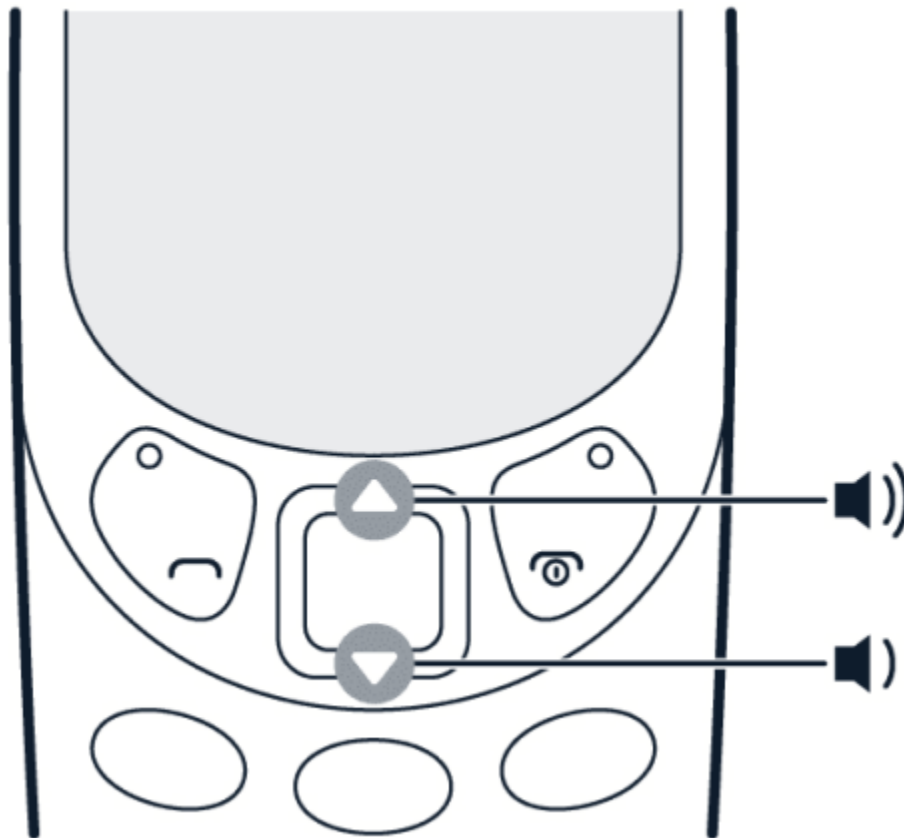

Change your ringtone:

1. Select Menu > Settings > Tones
2. Choose Ringtone
3. Scroll to a ringtone

4. Press ok

Is your ringtone too loud or too silent? Select Ringing volume and scroll left or right.

Change your message tones:

1. Select Menu > Settings > Tones > Messages
2. Scroll to a message tone
3. Press ok

Change the wallpaper:

1. Select Menu > Settings > Display settings > Wallpaper
2. Select Default to see the available wallpapers
3. Scroll to a wallpaper and select View to see how it looks on the screen
4. Select Choose and then the option to position the wallpaper on the screen

You can also select a wallpaper from the photos you have on your phone.

Make a call:

1. Type in the phone number. To type in the + character, used for international calls, press * twice.
2. Press the call key (5). If asked, select which SIM to use.
2. To end the call, press the end call key (6).

Send messages:

1. Select Menu > Messages > Create message
2. Select Add recipient to add a recipient. You can enter a phone number or add a recipient from either Contacts or Distribution lists
3. Write a message on the Message field
4. Select Send

Add a contact:

1. Select Menu > Contacts > Options > Add new contact
2. Write the name, and type in the number
3. Select Save

You can select which memory you want to use for storing contacts. Select Options > Settings > Memory. To save a phone number in the dialler, type in the number, and select Save .

Change the font size:

1. Select Menu > Settings > Display settings > Font size
2. Select the application where you want to have larger font, Messaging, Contacts, or Menu
3. Scroll to the font size you want to use and select Choose

Show date and time:

- You can choose if you want to see the date and time on the home screen of your phone.

1. Select Menu > Settings > Date and time > Show date and time
2. Select On to have them visible on the home screen

If you want your phone to have time updated automatically, set Auto-update time to On.

Profiles:

- Your phone has different profiles for different situations. You can edit the profiles to your liking.

1. Select Menu > Settings > Profiles
- 2 Select a profile and Personalize

For each profile you can set a specific ringtone, ringtone volume, message sounds and so on.

Settings for Go To:

- You can add quick links to different applications and settings to Go to. On the bottom left-hand corner you have Go to, and when you select it, you can access different applications and settings. You can change the applications and settings to your liking.

1. Select Menu > Settings > Go to settings
2. Select Choose options
3. Scroll to a shortcut you want to add on the Go to list on the home screen and Mark them
4. Select Done to exit the list, and Yes to save changes

You can also reorganize your Go to list.

1. Select Organize
2. Scroll to an item you want to move and select Move
3. Select if you want to move it up, down, to top, or to bottom of the list
4. Select Back to exit the list, and Yes to save changes


Take a photo:

1. To switch the camera on, select Menu > Camera
2. To zoom in or out, scroll up or down
3. To take a photo, select camera button
4. To take a selfie, select Selfie > camera button
5. To switch the flash on, in camera, select menu > Flash on

Record a video:

1. To switch the camera on, select Menu > Camera
2. To switch the video camera on, select menu > Video camera
3. To start recording, select start
4. To stop recording, select stop

Internet and connections:

1. Select Menu >  > Surf or search
2. Write a web address, and select OK

If you want to avoid data costs, switch mobile data off when you are not surfing the web. In your dual SIM phone, select Menu > Settings > Connectivity > Dual SIM , and switch Mobile data connection to Off.

Radio:

Connect a compatible headset. It acts as an antenna.

1. Select Menu > Radio
2. To search for all available stations select Options > Auto tuning
3. To switch to a saved station select Options > Stations, and scroll up or down

Change the time and date:

1. Select Menu > Settings > Date and time
2. Switch Auto-update time to Off
- 3 To set the time, scroll down, and select Time. Use the scroll key to set the time, and select OK
4. To set the date, scroll down, and select Date. Use the scroll key to set the date, and select OK

Set an alarm:

1. Select Menu > Alarm Clock
2. Select an alarm and Edit > Change
3. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down
4. Select OK > Save

Add a calendar reminder:

1. Select Menu > Calendar
2. Select a date and Options > Add event
3. Type in a name for the event
4. To set the time, scroll down, and select Change. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down
5. Select Save

Switch on Bluetooth:

1. Select Menu > Settings > Connectivity > Bluetooth and switch Bluetooth on

Create a backup:

1. Select Menu > Settings > Backup > Create backup
2. Your device tells you that creating a backup may take a while and that you should not turn the phone off while the backup is created. Select Choose if you want to create a backup
3. A list opens where you can mark the data you want to backup. You can Mark them one by one, or select Options > Choose all
4. Your phone tells you when the backup is created

Restore a backup:

1. Select Menu > Settings > Backup > Restore backup
2. Select Choose and mark the data you want to restore, and select Done
3. Your phone restarts after restoring the backup files