
Artfone G3 Flip



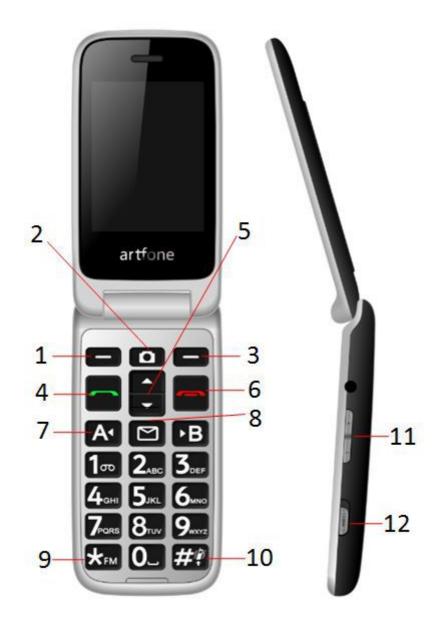

- 1. Left soft key (confirm or open menu)
- 2. Camera
- 3. Right soft key (quit or open phonebook)
- 4. Green key (answer/make a phone call or check call logs)
- 5. Navigation key
- 6. Red key (end a call or power on/off)
- 7. Speed dial A/B (long-pressing A/B button to set a speed dial number)
- 8. SMS button
- 9. * button (long-press for wireless FM or exit)
- 10.# button (long-press to switch to "meeting mode" or "general mode")
- 11. Volume adjustment
- 12. Flashlight button

Icon description



How to power on?

Press the red button for 2.5 seconds.

How to power off?

Make sure the keypad is unlocked, then press the red button for 2.5 seconds.

How to use a flashlight?

Just press the No.15 button on the side to turn on or turn off the flashlight.

How to use the SOS function?

- Go to SOS settings and turn the status on or off
- SOS numbers: This is very important; you can set up to 5 telephone numbers here. When you press the SOS button, the phone will dial the numbers one by one automatically.
- SOS SMS ON/OFF: You can turn on or off SOS message
- SOS SMS: You can edit SMS

How to make a call?

- 1. Input a telephone number and press the left green button
- 2. Find a contact in the phonebook and press the left green button
- 3. SOS special dial: press the SOS button, and the phone will dial pre-set SOS number automatically
- 4. Speed dial

How to change ringtone/message tone/volume?

Go to Settings \rightarrow Profiles \rightarrow General \rightarrow Customize

FAQ - Frequently Asked Questions

- 1. What SIM card is supported by the phone?
 - It supports nano and micro SIM card, but the micro card is preferred.
- 2. Does this phone work on the 3G network?
 - Yes, it works for both 2G and 3G networks.
- 3. Is the phone unlocked?
 - Yes, all Artfone phones are unlocked.
- 4. Does the phone packaging have an earphone?
 - No, but this phone has a 3.5mm audio jack