

Forever Call Me 2 KW-60 Kids Smartwatch



Specifications:

- Display: 1,44", 128 x 128
- Charging time: about 3h
- Maximum standby time: 3 days

- Battery capacity: 400mAh
- Strap length: 230mm
- Compatible OS: iOS 10.0 and above, Android 5.0 and above

Device description:

1. Speaker
2. MicroUSB port
3. Microphone
4. Camera
5. Answer the call / Turning on the flashlight (press twice)
6. Flashlight
7. On/Off/SOS/Return to main screen
8. Touch button - return to the start screen



Charging

It's recommended to use a charger of output parameters of 5V DC, 1A. The charger is not included in the package. To fully charge the watch, it'll take approximately 2 hours. Connect the included micro USB cable to the watch and then connect the second end of the cable to a USB port in a computer or a charger.

Preparation of the watch

Open the back cover of the watch, then remove the battery. Open the SIM card protection and insert a SIM card into the slot so that the chip is facing up to the watch. Always make sure your watch is turned off before inserting or removing the SIM card.

First launching

After installing the SIM card and making sure that the device is charged up, you may activate it by pressing and holding the ON button. Upon activation, the watch will connect to the mobile network.

Watch operation

The watch is operated using the touch screen by moving your finger on the screen. You can switch between individual functions and you select a given function by pressing the screen.



1. Watch home screen shows the current date and time as well as battery level. On this screen, we also see the icon for connecting to the mobile network and the icon for the amount of contractual awards received.
2. Enables you to make a phone call by manually entering the number.
3. The phone book gives you access to 10 contacts defined using the application
4. Allows you to take a photo that will be saved in the album.
5. Access to the last photo taken. Possibility to preview, send or delete it. Each subsequent photo taken overwrites the previous one.
6. A simple math game with three levels.
7. It allows you to send voice messages and receive text and voice messages.

8. It allows you to start the flashlight built into the watch.
9. It allows you to read the registration QR code for the device and the application QR code.

Forever application

Download the application "Forever KidsCare" (Google Play) or "ForeverCare" (App Store) and install it on your phone. You can also scan the QR code.



Functions

1. Chat: Send a text or voice message to the watch by typing it on the keyboard or recording it using the phone's microphone. You can also listen to the voicemails sent from the watch here.
2. Route: select the date and time slot to display the traveled route.
3. Map: Select the map icon to view the current location of the watch.
4. Safety zone: designate a safety zone, when the watch is found outside the selected zone, you will receive a notification from the app.
5. Reward: Select the number of rewards you want to send to your child. After approval, the information about the award will be sent to the watch.
6. Alarm clock: alarm clock settings. Set the desired time and frequency of repeat.
7. Find Watch: Select a feature to find your device if it's near you. The watch will ring to inform you of its location.
8. Notifications: This is where you get and preview any notifications and alarms you receive from the watch.
9. Remote camera: take a photo using the watch camera and receive it on your phone. The captured image appears after a certain waiting time, depending on the signal strength of the cellular network.
- 10 My profile:
 - Personal data: Your account settings
 - Device list: Add, edit or remove a connected devices
 - Change Password: Change the password for your account

Settings

1. SOS numbers: when the watch user presses and holds the SOS button, the watch makes an automatic emergency call to three contacts defined on list.
2. Voice monitoring: enter the phone number to be called from the watch in order to listen to its surroundings. Pick up the call and check what's happening nearby. The user of the watch has no notification that such a call has been made.
3. Do not disturb: Select the time during the day when the user of the watch will not receive phone calls.
4. Location mode: select normal mode - refreshing the watch's location once every ten minutes, power saving - once every hour, tracking - once every minute.
5. SMS notifications: enter the number to which you want to receive SMS notifications about events such as: low battery level in the watch, triggering the SOS alarm using the watch button.
6. Phone book: Define up to ten contacts that the watch user will have in the phone book.
7. Time zone: set your time zone then the device shows the correct date and time on.
8. Language: Choose language for your device from the available.
9. Settings switch: Enable or disable the watch function.
10. LBS Location: Enable or disable location using network operators antennas.
11. Turn off watch remotely: watch will be turned off.