


User Manual for Dual-Lens WiFi Action Camera / Security Camera D3



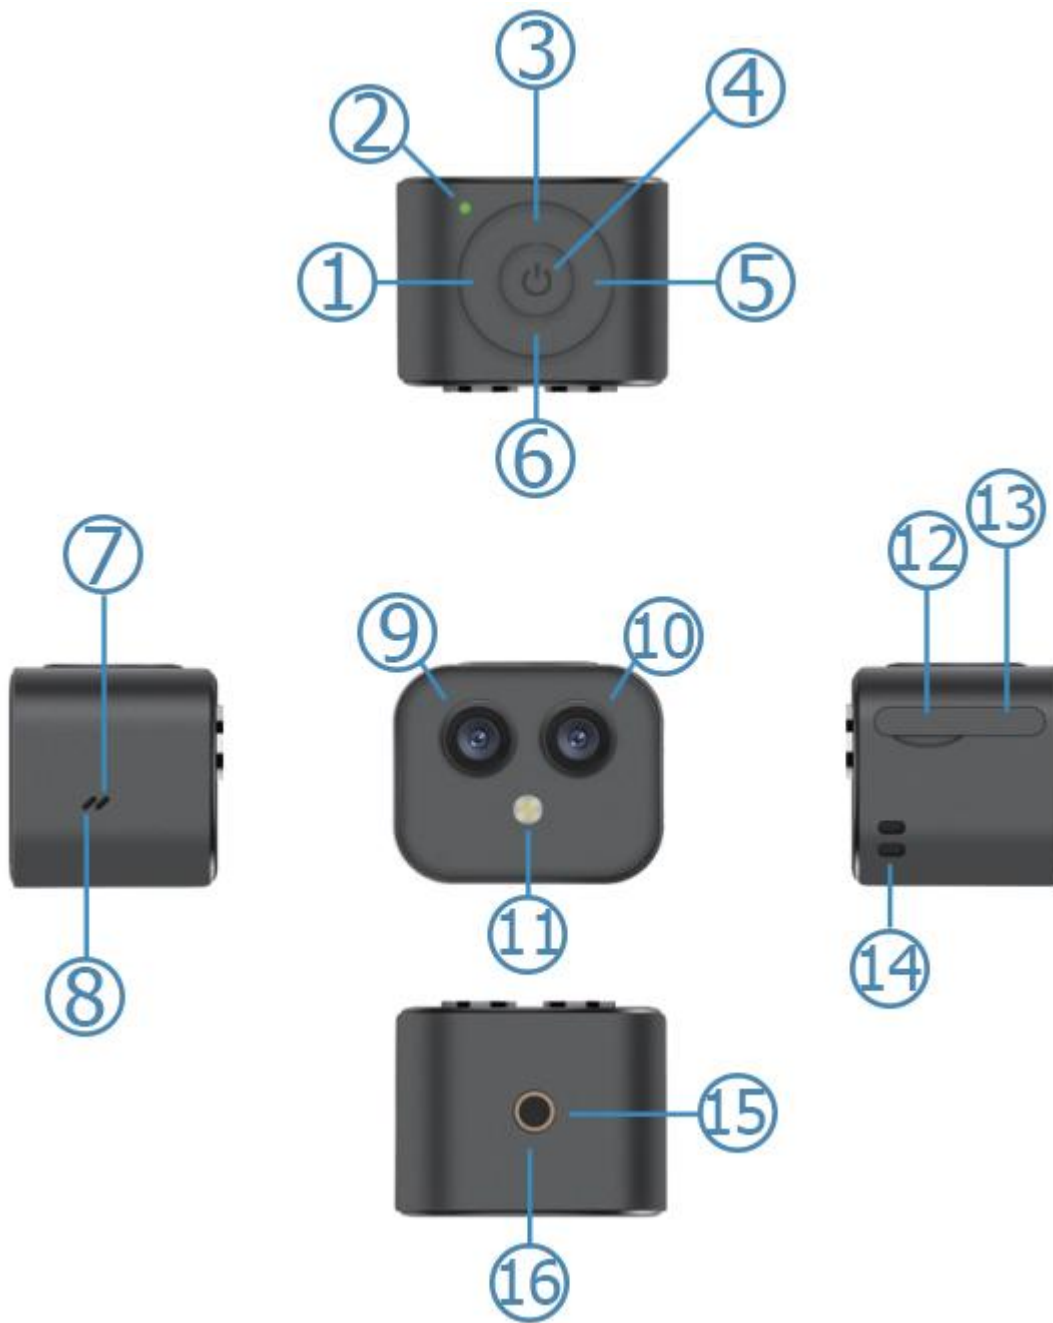

1. Right button
2. Indicator light
3. Down button
4. On/Off button
5. Left button
6. Up button
7. Microphone
8. Loudspeaker

9. Wide-angle lens
10. Telephoto lens
11. LED light
12. Charging port
13. Memory card slot
14. Lanyard hole
15. Magnetic attraction position
16. ¼" threaded tripod interface

Specifications


- Model: D3
- Connectivity: WiFi
- APP: FtyCamPro
- Photo resolution: 16MP lens + 16MP 170-degrees wide angle lens
- Viewing angle: 170 degrees
- Video resolution: 4K
- Audio output: Speaker
- Supported storage: microSD card up to 128GB

FtyCamPro App

First of all search the FtyCamPro app on the Google Play Store for Android or App Store for iOS, download, and install it. You can also scan the QR code below to find the app.



App functions

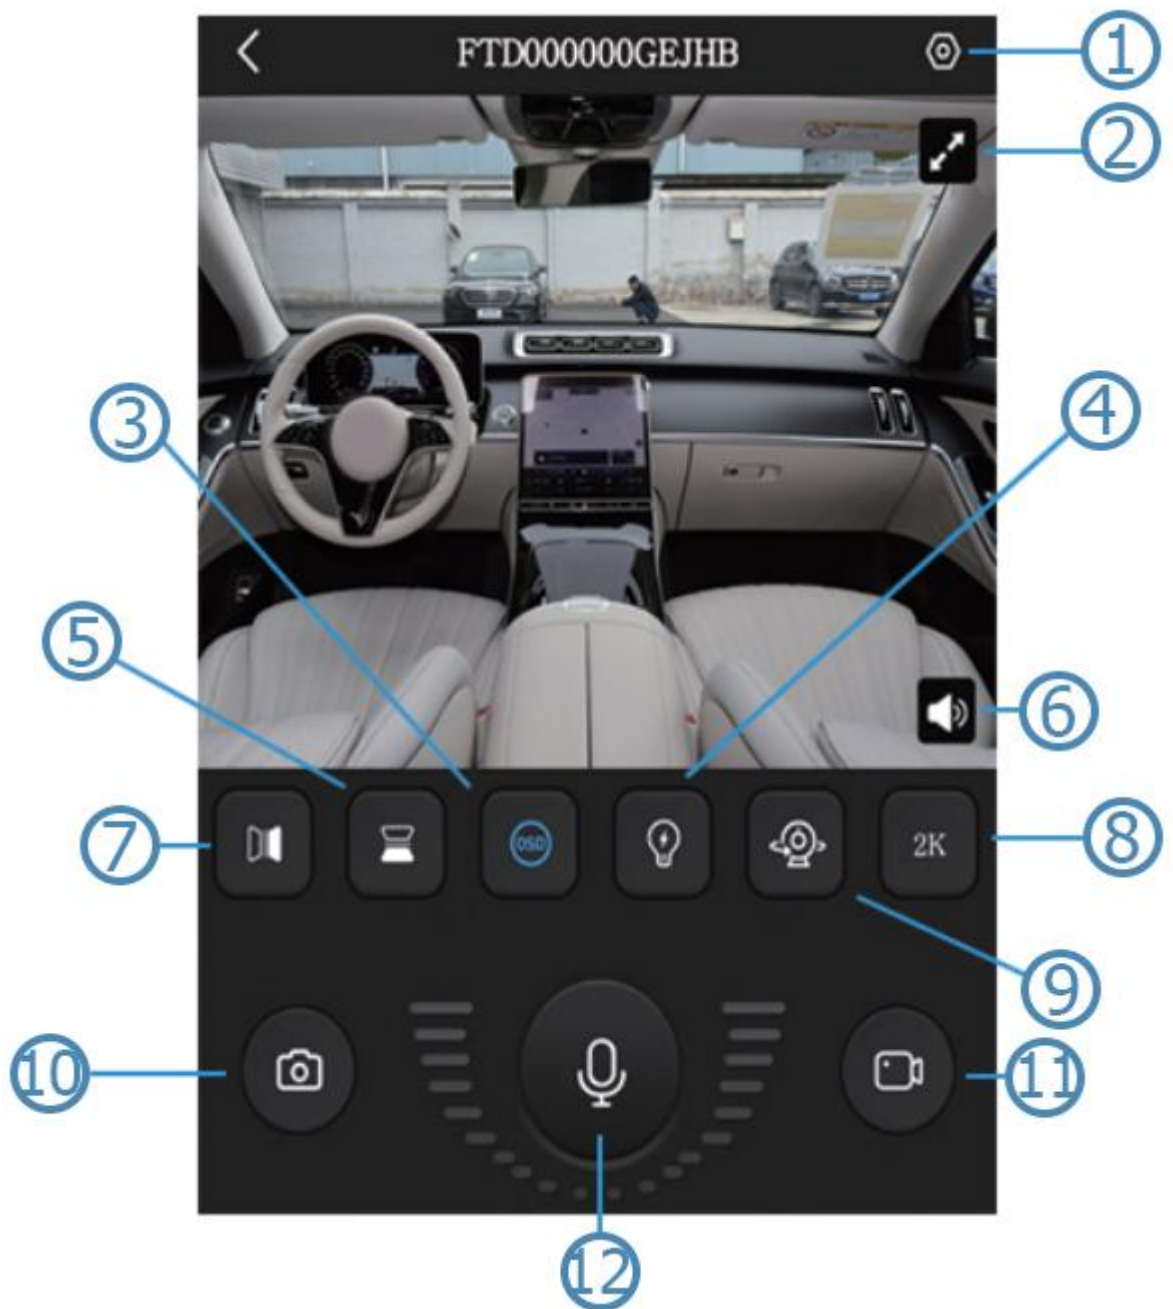

- | | |
|-----------------------------|--------------------------------|
| 1. Set up | 7. Screen left/right switching |
| 2. Fullscreen | 8. Resolution adjustment |
| 3. Data view | 9. Lens switching |
| 4. Night vision On/Off | 10. Take a photo |
| 5. Screen up/down switching | 11. Video recording |
| 6. Sound On/Off | 12. Intercom button |

Operation instructions

To power the camera On, press the On/Off button in the middle of the camera and the green light will start flashing. Connect your phone via a WiFi connection to the camera and the blue light will indicate that the connection is successful.

To take a photo press the left button. The light is not on while taking a photo, there will be a prompt sound in the app.

To start recording a video, press the right button. There will be a video opening prompt in the app. To stop recording and save the video, press the right button again.

To rotate the screen long-press the up button for 4 seconds. To turn the light On or Off, press the Up button.

To reset the network, press and hold the Down button until the green light starts flashing. It means the network is reset and needs to be reconnected to the device.

To switch between the wide-angle and telephoto lens, press the Down button.

Network connection

To connect the smartphone directly to the camera do the following: Turn on the camera, open the app on your smartphone, and tap on the + button to add a device. Connect to the camera via WiFi network. The hotspot name of the camera is FTY-xxx. You can also control the camera using your phone if they are connected to the same network.

To connect the camera to the router, do the following: select “connect to the device hotspot or the router where the device is located”, then connect the camera to your phone using the camera hotspot. The hotspot name is FTY-xxx, then return and connect to the available WiFi network to save the connection. After the camera is connected to the router, you can watch the camera feed in real time over the app.