


SMB-05 Wireless Bone Conduction Under-Pillow Speaker / White Noise Machine



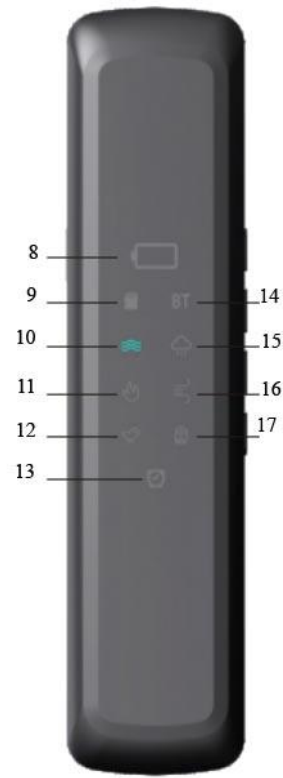

1. TF card port
2. Type-C charging port
3. Charging lighting
4. - Button
5. + Button
6. M Button
7. Power on/off button
8. Battery display
9. TF card display
10. Brook
11. Campfire
12. Bird
13. Timer symbol
14. BT display
15. Rain
16. Ocean Waves
17. Train

Instructions

Power On/Off

Power On: Press and hold the power button for about 3 seconds to turn on the device.

Power Off: Press and hold the power button for about 3 seconds to turn off the device.

The indicator light will turn off.

Bluetooth Connection

1. When using the device for the first time, it will automatically enter Bluetooth pairing mode after powering on.
2. The BT indicator will blink. You can search for "BLD05" on your phone and click "BLD05" to pair and connect.
3. Once connected, the BT indicator will remain lit. While playing music press the power button to pause or play music.

M Button Functions

1. Click the M button: Switch between Bluetooth, TF card, and white noise playback modes.
2. In White Noise Mode:
 - Long press "+" button for 2 seconds: Switch to the next white noise song.
 - Long press "-" button for 2 seconds: Switch to the previous white noise song.
 - Short press the "+" or "-" button to Adjust the volume.

"+" / "-" Button

1. Short press "+" button: Increase volume.
2. Long press "+" button for 2 seconds: Skip to the next song.
3. Short press "-" button: Decrease volume.
4. Long Press "-" button for 2 seconds: Go back to the previous track.
5. In Timer Setting Mode: The "+" and "-" buttons can be used to adjust the timer duration.

Timer Shutdown

1. Quickly double-click the power button: Enter timer mode. The timer indicator will light up and blink.
2. While the timer indicator is blinking: Press the "+" and "-" buttons to select the timer duration (30 minutes/60 minutes/120 minutes).
3. The device will provide a corresponding voice prompt (Since the timing indicator light flashes briefly, it is essential to select the time while the timing indicator light is flashing).
4. After setting the timer: Wait for 2-3 seconds, The timer indicator will stop blinking and remain lit, indicating that the timer has been successfully set.

Charging

Use the included Type-C charging cable and any 5V phone charger to charge the device. The red indicator light will stay on during charging and will turn off when the device is fully charged.

Faults and eliminate

Can not power on?

Check if the battery is without power ,Keep Press power on button 3 seconds.

Bluetooth disconnect?

Whether the product is in a pairing state? If the product indicator is blinking blue at a slow time, it indicates that the product is connected to other devices. Please disconnect the currently connected devices.

Large sound leakage?

In sleep mode, please adjust the volume of the mobile phone to within 50%, which can not be heard by the person next to the pillow. The volume above 50% is entertainment mode.

Bluetooth range

Please confirm whether the phone is connected to Bluetooth version 4.0 or later. Earlier versions may cause short Bluetooth range.